

A-DCFX9

V-Mount Battery adaptor for Sony PXW-FX9



取扱説明書

このたびは、A-DCFX9をお買い求めいただきまして、ありがとうございます。A-DCFX9は、Sony PXW-FX9用のIDX製Imicroバッテリーアダプターです。ご使用に際しては、本書をよくお読みいただき、基本的な取扱方法や注意事項をご理解された上で、安全にお使いください。お読みになられた後は、いつでも見られるところに必ず保管してください。

安全にお使いいただくための注意

間違った使い方をした場合、火災、感電あるいは怪我や製品故障などの重大な原因となることもあります。事故を防ぐために、下記の項目を必ずお守りください。

⚠ 警告：死亡や重傷を負う危険が生じる可能性があります

- 機器の定格や使用条件を越えて使用しないでください。
- 端子間を金属類でショートさせないでください。また、金属製の物と一緒に持ち運んだり、保管しないでください。
- 水で濡らしたり、水中に投げないでください。
- 分解したり改造したりしないでください。
- 落下させたりハンマーで叩くなど、強い衝撃を与えないでください。
- 重い物を載せたり、圧力を掛けないでください。
- ケーブルを傷つけないでください。
- ケーブル接続の際はケーブルを強く引っ張らないでください。
- 損傷が著しい場合は使用しないでください。

⚠ 注意：けがや物品損害が生じることがあります

- 必ず弊社指定の使用条件を守ってください。
- 高温環境下では使用しないでください。
- 水にぬれた場所や湿度の高い場所で保管しないでください。
- ご使用中に異臭や液漏れ・変色・変形などがあった場合は、ただちに使用を止めてください。
- バッテリーを接続したままの状態での移動や運搬は行わないでください。
- 使用後はバッテリーを取り外してください。
- ご使用される機器の入力電圧をご確認の上、接続してください。

特徴

- Imicro バッテリーから 19.5V 出力に変換し、PXW-FX9 を駆動可能
- 小型・堅牢ボディ
- アラーム LED 付き

仕様


- 適応バッテリー：IDX 製 Imicro バッテリー
- 出力プラグ定格：19.5V
- D-Tap 出力：バッテリースルー電圧 最大 80W
- 出力プラグ：外径：6.5mm 内径：4.3mm ピン径：1.4mm L 字タイプ

マイナス ⊖ ⊕ プラス

- アラーム LED：バッテリー残量低下時に赤点灯
- 放電温度範囲：-20℃～+45℃（推奨 10℃～40℃）
- 外形寸法：66(W)×101.5(H)×84(D) mm（突起部除く本体のみ）
出力ケーブル長さ 約 95mm（プラグ含まず）
- 重量：約 400g


各部名称

- | | | |
|----------------|-------------|-------------|
| ① アダプター本体 | ④ バッテリー入力端子 | ⑦ カメラ取り付けネジ |
| ② バッテリーリリースレバー | ⑤ D-Tap | ⑧ アラームLED |
| ③ Vマウント | ⑥ 出力プラグ | ⑨ ガイド |

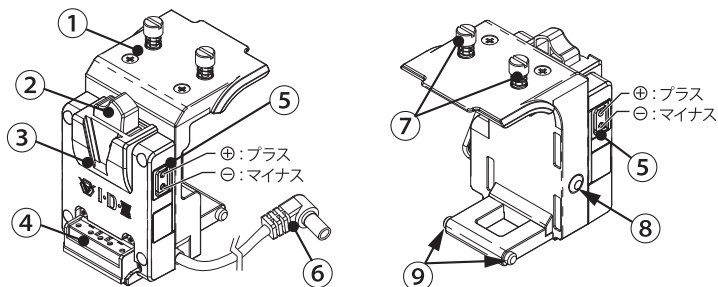

PXW-FX9 への装着方法

- ①：カメラの2本のネジを外し、拡張ユニット接続端子部カバーを外す
- ②：出力プラグをカメラのDC IN端子へ接続する
- ③：カメラのバッテリー挿入口の溝にガイドを挿入し、装着する
- ④：カメラ取り付けネジを締めて固定する（2カ所）

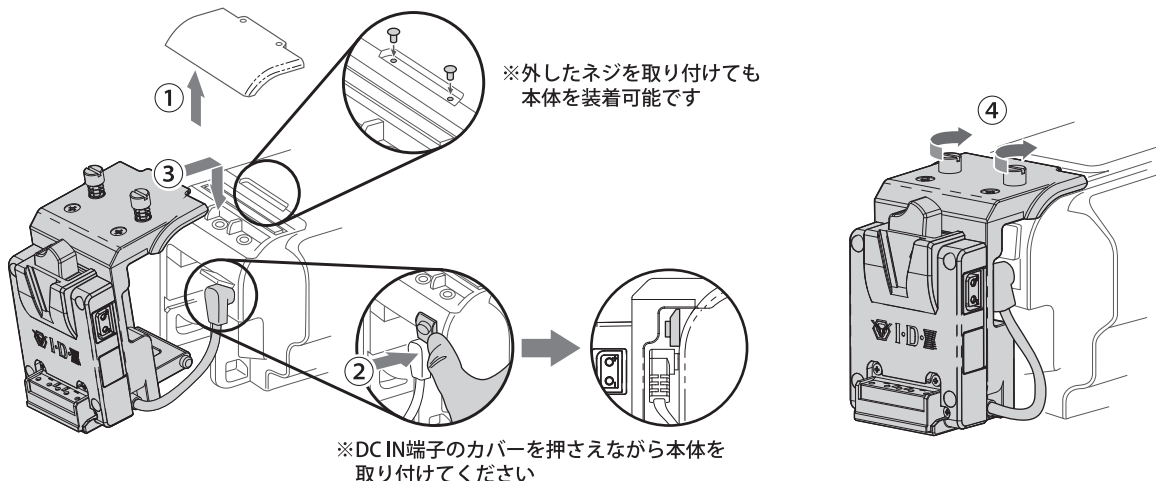

A-DCFX9

V-Mount Battery Adaptor for Sony PXW-FX9



Instruction Manual

Thank you for purchasing the A-DCFX9. A-DCFX9 is an IDX Imicro battery adaptor for Sony PXW-FX9. Prior to using the product, please read this manual carefully and understand the basic handling methods and precautions before using the product safely. After reading it, be sure to keep it in a place where you can see it at any time.

⚠ WARNING

May cause sudden serious injury and death

- Do not use the product beyond the rated or operating conditions of the device.
- Do not carry or store with metal equipment.
- Do not immerse in water.
- Do not attempt to open the outer casing or break apart.
- Do not subject the unit to extreme physical impact or pressure.
- Do not short the contact pins with any metal object.
- Do not attempt to use if damaged.
- Do not place heavy objects or apply pressure.
- Do not damage the cable.
- When connecting the cable, do not pull the cable strongly.

⚠ CAUTION

May cause sudden serious injury and death



- The unit should be used under the conditions listed in this manual.
- Do not expose the unit to extremely high temperatures.
- Keep the unit away from fluid or high humidity environment.
- Remove it from the device and stop using it immediately if an odour, leakage, discoloration or deformation is noticed. Do not carry the adaptor while the battery is attached.
- Remove the battery after use.
- Check the input voltage of the device to be used before connecting.

Features

- Converting to 19.5V output from IDX Imicro battery to operate Sony PXW-FX9.
- Compact, light weight, durable construction
- Equipped with Alarm LED

Parts Description

- | | | |
|-----------------|---------------------|--------------------------|
| ① Body | ④ Battery connector | ⑦ Camera mounting screws |
| ② Release lever | ⑤ D-Tap | ⑧ Alarm LED |
| ③ V-mount | ⑥ Out put plug | ⑨ Guide |

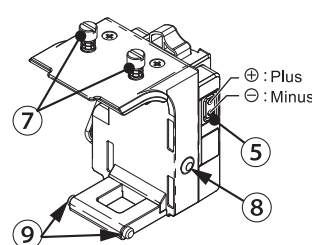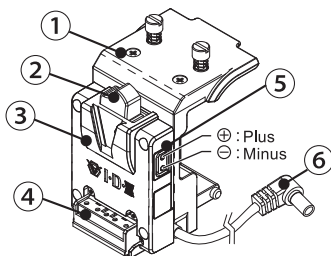


Specifications

- Recommended batteries : IDX V-mount Imicro battery
 - Output plug : 19.5V
 - D-Tap output : DC Unregulated MAX 80W
 - Output plug : outside diameter : approx. 6.5mm / 0.25 inches
inside diameter : approx. 4.3mm / 0.17 inches
Pin diameter : approx. 1.4mm / 0.05 inches L-shaped
- Minus Plus
- Alarm LED : Light RED when the battery capacity becomes low.
 - Discharging temperature : -20°C ~ 45°C / -4 ~ 113°F
(recommended 10 ~ 40°C / 50 ~ 104°F)
 - Dimensions : approx. 66 (W) × 101.5 (H) × 84 (D) mm
approx. 2.59 (W) × 3.99 (H) × 3.3 (D) inches
*Warning. Do not use these dimensions for reference.
 - Weight : approx. 400g / 0.88 lbs

Attaching the A-DCFX9 to the PXW-FX9

- ① : Remove screws and the cover from the camcorder.
- ② : Connect the output plug to DC IN connector of the camcorder.
- ③ : Fit the upper part of the A-DCFX9 into the guide hole of the camcorder.
- ④ : Tighten the mounting screws to fix.

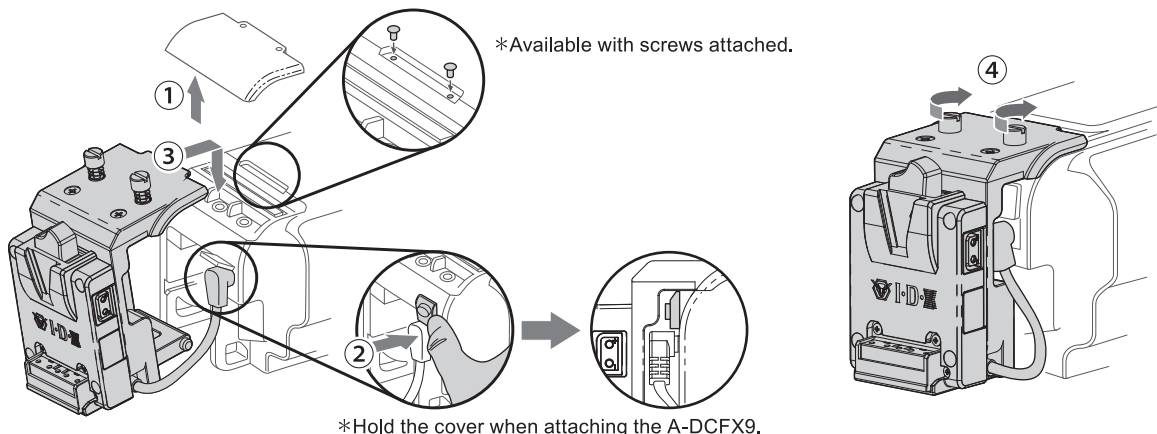

Design and specifications are subject to change without notice.